

The anti-arc protection preserves the electronics of a vehicle by absorbing the overvoltage peak during welding operations or vehicle interventions.

## SIMPLE TO USE

To be connected simply to the + and - of the battery.

## OPERATION

### Green LED on:

Normal use, the protection is activated.

### Red LED on + buzzer sounds:

The unit has absorbed an important overvoltage and the vehicle is no longer protected. It is necessary to replace the anti-arc protection to protect again the electronics of the vehicle.

